FTS–P200 Dialup Internet Telephone
Step by Step Installation Guide – *Analog Dialup Mode*

FTS–P200 Dialup Internet Telephone

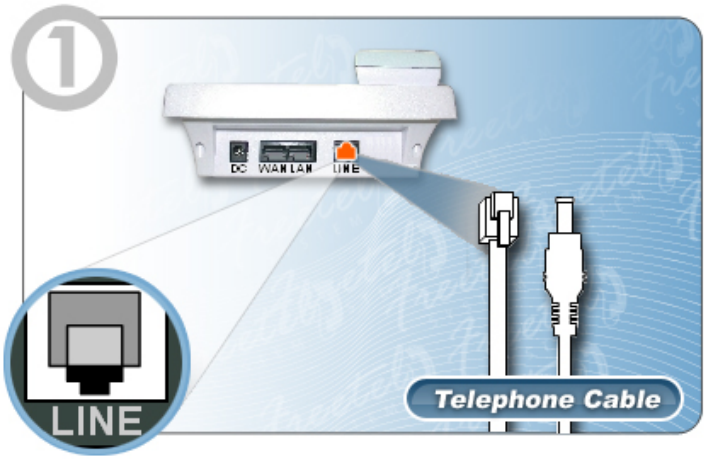

Connect the LINE Port of FTS–P200 to your Wall Phone Jack (your regular home Telephone Line or office Telephone Line) with any regular Telephone Cable.

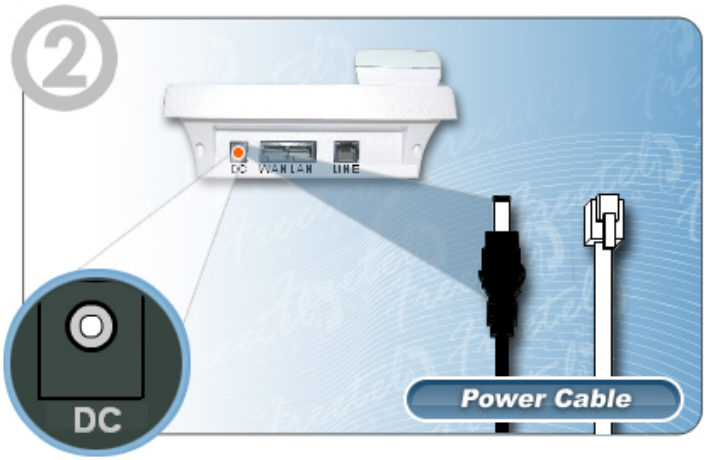

Plug the Power Cord into the DC Connector of FTS–P200 and an Electrical Outlet. This step will turn on the FTS–P200.

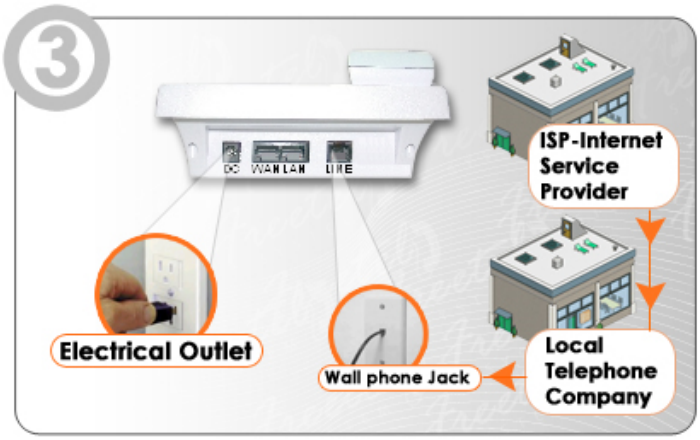

<u>Important:</u> You must wait at least five minutes before using your phone and do not turn off the FTS–P200 during the first ten minutes. Also, you do not need to unplug FTS–P200 when it is not in use.

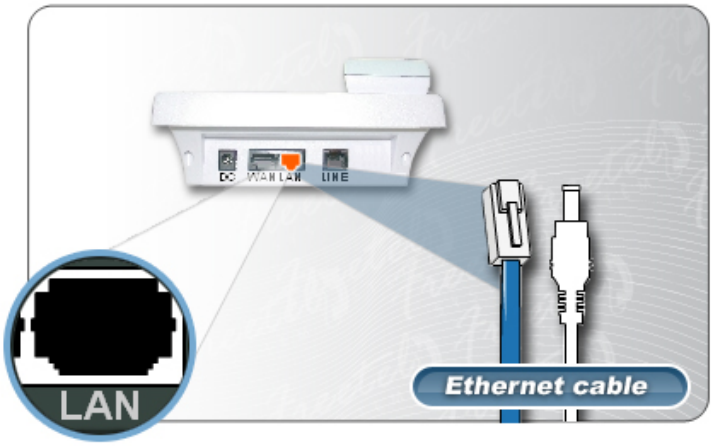

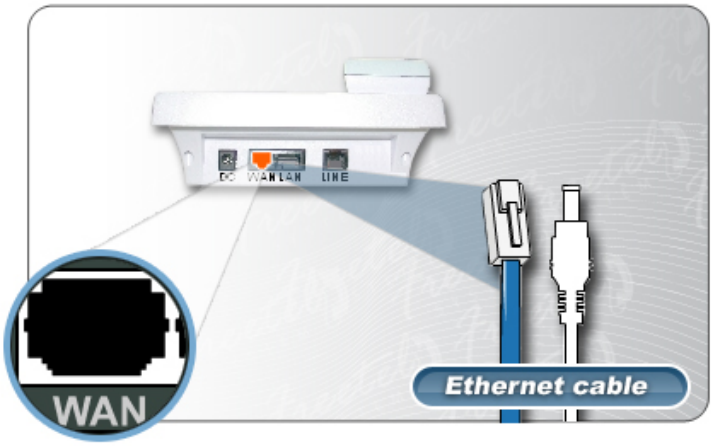

<u>Broadband Mode:</u> Do not connect anything to the WAN and LAN Ports of FTS–P200. If you want to use the Broadband Mode, please refer to the FTS–P200 Installation Guide - *Broadband Mode*.